 


Candy Grabber Deluxe Manual



Step 1:

1. Cut and remove the cable tie from the round top cover.
2. Open the top cover, find the second cable tie inside, and remove it as well.

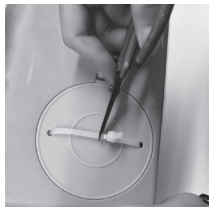


Step 2:

1. Attach the clear half-circle to the colored half-circle.
2. Children can add some candy inside when assembling the capsule.

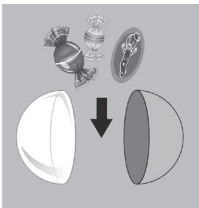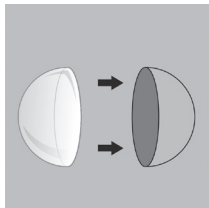

Step 3:

1. Turn on the switch and the light will turn on.
2. Put a coin in the slot to start the game. Music will play.
3. Use the joystick to move the claw and grab a toy.
4. Drop the toy into the bag to finish the game.

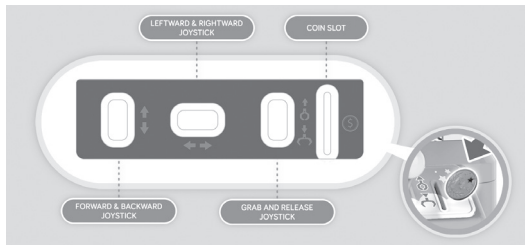

Remark:

The device can be powered by either batteries or a USB charging cable. If you are using the USB charging cable, please remove the batteries first.

mikamax®

Candy Grabber Deluxe

SKU - 05121

mm

MikaMax B.V.

www.mikamax.com

sales@mikamax.nl

Rhone 40, 2491 AP - The Hague

mikamax®, The Netherlands

Made in China, produced for MikaMax

